

## Cross Reference - Holset to Melett

OE Number	Melett No	Description
9510	1301-036-140	Retaining ring (bearing)
9511	1250-404-435	Shaft and Wheel 4MD
9516	1150-400-170	Piston Ring
9517	1100-040-180	Piston Ring T04B T/end
9523	1250-404-142	Snap Ring
9627	1250-404-401	Compressor Wheel 4MD-351 (Hol 4B)
9737	1900-000-035	GASKET
9738	1900-000-025	Gasket
9749	1900-000-004	Gasket Turbine Inlet Single Entry T12
9753	1152-302-140	Snap Ring H2C/HX50
9764	1150-413-170	Piston Ring (3FD/3FJ) Comp End>
9765	1152-303-170	Piston Ring
9774	1152-302-520	Lock Plate (H2C/HX50 Turb)
9774	1152-302-520	Lockplate (c/cover)
9779	1301-027-580	Spring Washer (Comp. Hsg. Retainer) 3LD/4LG 1/4"
9816	1900-000-006	Gasket Turbine inlet Single Entry 3LD-T04B-K27
9867	1150-400-172	Piston Ring As 9816 but sintered
9988	1900-000-025	Gasket
13070	1250-404-100	Bearing 4B-D-V4HD-4MD Std OD/ Std ID With grooved ends & Grooved ID
13073	1250-404-140	Snap Ring
15155	1250-404-200	Flinger Sleeve
15160	1100-120-610	Bolt. (Insert Plate) T12
15173	1250-404-346	V Band Clamp Assy Comp/Hsg 9"
15174	1250-404-345	V Band Clamp T/Hsg 7" 4MD
15178	1250-404-340	Heat Shield
15180	1100-120-610	Bolt. (Insert Plate) T12
15186	1100-120-645	Nut. V Band clamp. T12
15187	1100-180-610	Bolt (Comp end)
15189	1250-404-250	Shim 0.003
15190	1250-404-251	Shim 0.005"
15191	1250-404-252	Shim 0.010"
15192	1250-404-630	Spring Washer, lock tab, Thrust bearing
15193	1250-404-240	Thrust Ring 4MD
15194	1250-404-220	Spacer Sleeve
16407	1250-404-402	Compressor Wheel 4MD-354
16409	1250-404-400	Compressor Wheel 4MD-351 (Hol 4")
16569	1250-404-350	Shaft Nut 4MD
16575	1250-404-900	Noz Ring 4MD (.318)
16577	1250-404-901	Noz Ring 4MD (.246)
18364	1250-404-407	C/W 4MD-654 (Hol 4")
18366	1250-404-409	C/W 4MD-754
18373	1250-404-142	Snap Ring
18455	1301-036-220	Spacer Sleeve (4LE/K36)
18465	1250-404-861	T/Hsg 6Hole out UNC
18493	1250-404-141	Snap Ring 4HD
18494	1250-404-300	Insert Plate 4MD 4HD
18497	1250-404-310	Oil Deflector 4MD
18499	1250-404-150	O Ring 4MD
20051	1250-404-630	Spring Washer, lock tab, Thrust bearing
20120	1250-404-260	Oil Control Sleeve 4B, 4MD, 4HD
20936	1250-404-320	Thrust Bearing 4MD
20937	1250-804-240	Thrust Ring 4HD
20938	1250-404-330	Spacer Plate
20940	1250-040-350	Shaft nut (4LE/F/GK)

OE Number	Melett No	Description
20987	1250-404-155	O Ring C/End 4MD
22366	1250-040-100	Bearing (4LE- HC3 -HT3B -K361)
22447	1150-400-160	Piston Ring (HCSKM)
23828	1250-404-901	Noz Ring 4MD (.246)
23839	1250-040-260	Oil Control Sleeve (4LE)
23845	1250-030-150	O Ring (Insert HSKM)
23863	1250-403-140	Snap Ring 3LD/4LE/HC3/HT3B (Insert retainer)
23863	1250-403-140	Snap Ring
23937	1250-404-411	C/W 4MD-755 also 4HD
25233	1250-404-450	B/Hsg Oil inlet and outlet UNC without threaded mtg bosses on side
25279	1250-403-240	Thrust Ring 3LD
25489	1250-404-800	Comp. Hsg
27028	1250-404-412	C/W 4MD-757
27046	1250-404-405	C/W 4MD-458
27047	1250-404-406	C/W 4MD-558
51135	1250-403-300	Insert Plate
51136	1250-403-320	Thrust Bearing 3LD
51140	1150-403-100	Bearing 3LD Holset Type (Standard)
51142	1250-403-310	Oil Deflector 3LD
51143	1250-403-645	V Clamp
51145	1250-403-561	Bolt
51171	1250-404-408	Comp Wheel 4MD-659
51197	1200-050-630	Washer (2 Piece clamp Plate)
51197	1301-027-500	Clamp Washer 3LD C/Hsg (replace 2 with 1x 1301027500)
51217	1250-403-426	Comp Wheel 279 / 3LD
51220	1250-403-425	C/Wheel 259 / 3LD9
51240	1301-036-240	Thrust Ring
51301	1250-404-413	C/W 4MD759
51307	1250-404-320	Thrust Bearing 4MD
51375	1250-404-350	Shaft Nut 4MD
51382	1250-504-401	Comp Wheel 4LE 504 Radial
51749	1250-404-451	B/Hsg Oil inlet and outlet M8-6H
51773	1250-403-200	Flinger 3LD
51913	1900-000-026	Gasket 3LD Oil Outlet
51916	1150-403-100	Bearing 3LD (Std)
51948	1250-030-150	O Ring - (Insert 65mm)
51948	1250-030-150	O Ring (Insert HSKM)
52163	1250-404-451	B/Hsg Oil inlet and outlet M8-6H
52187	1250-403-800	Comp Cover 259 / 3LD9
52195	1150-400-160	Piston Ring (HCSKM) Stainless
52408	1250-404-903	Noz Ring 4MD (.280)
52409	1250-404-902	Noz Ring 4MD (.307)
52417	1250-403-861	Turbine Housing 3LD Twin Entry- 6 bolt discharge- 5/16 x18UNC 2.24sq in
52441	1250-030-150	O Ring (Insert HSKM)
52700	1250-404-435	Shaft and Wheel 4MD
52786	1100-120-350	Shaft Nut. T12
52799	1250-040-155	O Ring - (4LE/F/GK C/Hsg to B/Hsg Red)
52869	1250-040-320	Thrust Bearing (4LE-4LGK-4LG - No Ramping)
52951	1150-400-170	Piston Ring Stiff Ring
52951	1150-400-172	use 1150400170
52963	1150-403-630	Clamp Washer (B/Hsg to C/Hsg 3LD)
52980	1250-404-150	O Ring 4MD
52981	1250-404-155	O Ring C/End 4MD
52987	1150-504-200	Flinger (2 parts) 4LE 2 piston ring groove->
52988	N/A	Shaft & Wheel 3LD (2 x P/Ring Grooves)
52989	1250-403-200	Flinger 3LD
53281	1150-403-750	Repair Kit 3LD

OE Number	Melett No	Description
53367	1250-403-451	Bearing Housing (Step Bore)Metric ssb 142072
53368	1150-403-753	Repair kit 3LD (Step bore,Inc. Gaskets)
53472	1301-504-752	Service Kit 4LE/4LF
53474	1150-403-750	Repair Kit 3LD
53951	1250-404-753	Repair Kit 3LD
54149	1150-403-750	Repair Kit 3LD
54451	1150-403-750	Repair Kit 3LD
54914	1151-504-751	Repair Kit 4LE/F/G
54972	1150-403-750	Repair Kit 3LD
55310	1150-403-750	Repair Kit 3LD
55739	1900-000-036	Gasket 3LD Oil Intlet
55739	1900-000-037	Gasket (Oil Inlet 4LE)
55766	1250-404-200	Flinger Sleeve
55791	1250-403-435	Shaft / Wheel (1 groove)
55920	1250-404-435	Shaft and Wheel 4MD
56096	1250-403-802	Comp Cover 279 / 3LD1
56438	1150-513-300	Insert Plate 3FJ/3LM
56583	1150-403-800	Comp. Housing 3LD-1 / 279 UNC (No Hose lip)
56754	1150-413-160	Piston ring (3FD / 3FJ) Turbine end>
56754	1152-302-160	Piston Ring H1C/H2C/HX50 Turb.End
57175	1152-303-436	Shaft & Wheel (HC3 UNF T2)
57736	1250-040-320	Thrust Bearing (4L-/HC3/3LKS)
57753	1250-040-260	Oil Control Sleeve
57955	1250-040-400	Comp Wheel 4LE 302 Radial
58226	1250-403-450	Bearing Housing 3LD (step bore)
58656	1250-040-350	Shaft nut (4LE/F/GK)
58848	1152-302-170	Piston Ring H1/H2/HX50 Comp End
58963	1150-413-100	Bearing Std. (3FD / 3FJ)
59513	1250-040-320	Thrust Bearing (4MF) Taper land ssb 3519318
59517	1301-036-240	Thrust Ring 4MF (Use 1301036240)
59526	1301-027-610	Bolt (K27/K33/H2C/Garrett S/P to C/Hsg)
59618	1150-704-300	Insert Plate 4LGK/HC3
59721	1152-201-150	O Ring H1B>
59917	1152-302-600	Bolt (Turbine Hsg) >
59917	1153-035-600	Bolt (Turbine) HX30/35/40 (Stainless)
59917	1301-027-600	Bolt
59917	1301-027-600	Bolt (K27/T3 Turbine HT)
60250	1153-050-350	Shaft Nut H2C/HX50
60329	1250-403-320	Thrust Bearing 3LD With Angle hole for oil can use 1250403320
61255	1250-403-240	Thrust Ring 3LD
61275	1250-403-240	Thrust Ring 3LD
61685	1152-303-435	Shaft & Wheel (HC3/K361) UNF T3
61697	1152-302-100	Bearing Std OD/ Std ID H2B/C/D
61844	1150-400-170	Piston Ring
61867	1150-400-170	Piston Ring (0.875")
62259	1100-040-140	Retaining Ring (J.B.)
62915	1152-302-150	O Ring Seal Plate (H2/HX50)
70502	1301-036-140	Snap Ring (H.S.K)
114753	1900-000-002	GASKET
115156	1200-050-160	Piston Ring (Turb) CummST/VT50
156420	1200-050-100	Bearing (Cummins ST/ VT 50)
156444	1200-050-170	Piston Ring (Comp) CummST/VT50
167299	1200-050-640	Lock Nut(2 piece clamp plate)
170510	1200-050-281	Fiber Insert (Cummins ST/VT50)
171570	1200-050-340	Heat Shield (T50-ST50-VT50)
190849	1900-000-001	Gasket (Turb. 4 bolt) ST/VT50
194010	1200-050-600	Bolt (2 piece Clamp) ST/VT50

OE Number	Melett No	Description
195840	1200-050-160	Piston Ring (Turb) CummST/VT50
199415	1200-050-155	O Ring (B/Hsg) Cummins ST/VT50
202376	1200-050-450	Bearing Housing (T50-ST50-VT50)
202377	1200-050-280	Heat Packing (Cummins ST/VT50)
202392	1200-050-450	Bearing Housing (T50-ST50-VT50)
202456	1200-050-150	O Ring (Seal Plate)Cum ST/VT50
202457	1200-050-155	O Ring (B/Hsg) Cummins ST/VT50
202853	1100-180-140	Snap Ring.
202854	1100-180-100	Bearing OD. Std / ID Std. T12 / T18
202855	1100-180-190	Wear Washer (Bearing) T12 / T18
202856	1100-180-320	Thrust Washer T12
202857	1101-083-200	Thrust Collar (T18A - TV83)
202858	1100-180-220	THRUST SPACER T18A/TV71-81
202859	1100-181-150	O RING
202860	1100-045-170	Piston Ring TA45/ TA51/T18 /T 12 /T 6 C/E
202862	1100-181-550	Lock Tab (Back Plate)
202865	1100-180-350	Shaft Nut T18
202870	1100-040-560	Bolt
202872	1100-181-520	L/PLATE (TURB) T18A
202873	1900-000-003	Gasket
205396	1900-000-003	Gasket Metal Twin Entry
207425	1100-180-100	Bearing OD. Std / ID Std. T12 / T18
207426	1100-180-220	THRUST SPACER T18A/TV71-81
207431	1100-180-160	Piston Ring T18 S/B
207432	1100-120-645	Nut. V Band clamp. T12
211375	1200-050-156	O Ring C/Hsg (Cumm ST/VT50)
213806	1200-050-435	USE 1200-050-436
214086	1200-050-436	Shaft & Wheel (T50)
216791	1200-050-426	Comp. Wheel (T46-T50-ST50-VT50)
216793	1200-050-429	C/Wheel T50 / ST50
216794	1200-050-425	Comp. Wheel (T46-T50-ST50-VT50)
216795	1200-050-427	Comp. Wheel (T46-T50-ST50-VT50)
216797	1200-050-426	Comp. Wheel (T46-T50-ST50-VT50)
216799	1200-050-429	C/Wheel T50 / ST50
216801	1200-050-425	Comp. Wheel (T46-T50-ST50-VT50)
216802	1200-050-200	Thrust Spacer
216804	1200-050-300	Insert Seal Plate (S/Back) T50
216805	1200-050-300	Insert Seal Plate (S/Back) T50
354542	1301-027-350	Shaft Nut (K24/26/27) 6mm RHT
2575686	1100-025-181	Piston ring T/E T2 T25 +.010width
3002731	1200-050-428	Comp. Wheel (T46-T50-ST50-VT50)
3003835	1200-050-750	Service Kit T-ST-VT 50 Cum Lrg
3005327	1200-050-700	Core Assy ST50/VT50
3007755	1200-046-425	Comp Wheel (T46 / T46B)
3009197	1100-180-222	Spacer Sleeve
3009198	1101-083-200	Thrust Collar (T18A - TV83)
3010257	1200-050-700	Core Assy ST50/VT50
3012993	1200-046-426	Comp Wheel (T46 / T46B)
3022969	1200-050-160	Piston Ring (Turb) CummST/VT50
3023555	1200-050-751	Service Kit T-ST-VT 50 Cum Sml
3025390	1200-050-436	Shaft & Wheel (T50)
3026034	1200-046-450	Bearing Housing (CumminsT46B)
3029512	1200-046-427	Comp Wheel (T46 / T46B)
3031980	1200-046-427	Comp Wheel (T46 / T46B)
3034304	1200-050-350	Shaft Nut - Locking (Cummins ST/ VT 50)
3034720	1200-050-345	COUPLING, V-BAND
3034736	1200-050-160	Piston Ring (Turb) CummST/VT50

OE Number	Melett No	Description
3038745	<b>1200-050-450</b>	Bearing Housing (T50-ST50-VT50)
3426674	<b>1100-040-114</b>	Bearing OD +.005"/Std ID (Bronze NO Tin plating)
3500168	<b>1152-301-751</b>	Repair Kit (Full) H1B
3500433	<b>1152-303-435</b>	Shaft & Wheel (HC3/K361) UNF T3
3500681	<b>1900-000-037</b>	Gasket Oil Inlet H2C
3500682	<b>1900-000-025</b>	Gasket
3500683	<b>1900-000-003</b>	Gasket
3500684	<b>1152-303-170</b>	Piston Ring .750"
3500686	<b>1100-120-645</b>	Nut. V Band clamp. T12
3500688	<b>1250-404-142</b>	Snap Ring
3500689	<b>1301-036-220</b>	Spacer Sleeve (4LE/K36)
3500691	<b>1250-040-350</b>	Shaft nut (4LE/F/GK)
3500692	<b>1250-040-100</b>	Bearing (4LE- HC3 -HT3B -K361) Std OD/ Std ID
3500693	<b>1150-400-160</b>	Piston Ring (HCSKM)
3500694	<b>1250-040-260</b>	Oil Control Sleeve (4LE)
3500695	<b>1250-403-140</b>	Snap Ring
3500698	<b>1200-050-630</b>	Washer (2 Piece clamp Plate)
3500699	<b>1200-050-630</b>	Washer (2 Piece clamp Plate)
3500700	<b>1301-036-240</b>	Thrust Ring
3500703	<b>1250-030-150</b>	O Ring (Insert HSKM)
3500705	<b>1250-040-320</b>	Thrust Bearing (4L-/HC3/3LKS)
3500710	<b>1150-704-300</b>	Insert Plate 4LGK/HC3
3501552	<b>1301-027-610</b>	Bolt (K27/K33/H2C/Garrett S/P to C/Hsg)
3501819	<b>1152-301-751</b>	Repair Kit (Full) H1B
3502017	<b>1152-302-480</b>	Clamp Plate (H2C Turb)
3502017	<b>1152-302-480</b>	Clamp Plate (H2C Turb)
3502413	<b>1152-303-435</b>	Shaft & Wheel (HC3/K36) UNF T3
3502449	<b>1152-301-150</b>	O Ring - (B/H-S/P) H1/H2/HC5A
3502449	<b>1152-301-150</b>	O Ring (B/H-S/P H1C> H2A HC5A)
3502499	<b>1152-303-436</b>	Shaft & Wheel (HC3 UNF T2)
3502734	<b>1152-302-500</b>	Clamp plate (H2C Comp)
3502817	<b>1152-303-436</b>	Shaft & Wheel (HC3 UNF T2)
3503023	<b>1152-303-435</b>	Shaft & Wheel (HC3/K361) UNF T3
3503100	<b>1152-301-100</b>	Bearing H1C/HX30/35/40 Std/Std
3503335	<b>1100-120-645</b>	Nut. V Band clamp. T12
3503347	<b>1152-301-620</b>	Screw Thrust Brg H1/H2 (Encapsulated)
3503347	<b>1152-302-620</b>	Use 1152-301-620
3503562	<b>1152-301-351</b>	Shaft Nut H1C
3503662	<b>1152-301-200</b>	Thrust Flinger H1C/D/E H2A
3503707	<b>1152-302-320</b>	Thrust Bearing H2C
3504413	<b>1152-302-100</b>	Bearing H2BCD/ HX50 Std/Std
3504413	<b>1152-302-100</b>	Bearing Std OD/ Std ID H2B/C/D
3518004	<b>1153-050-580</b>	Lockwasher HX50
3518579	<b>1150-400-160</b>	Piston Ring (HCSKM)
3518595	<b>1150-400-160</b>	Piston Ring (HCSKM)
3518980	<b>1152-301-240</b>	Spacer Sleeve / Thrust Collar (H1C-D-E)
3518980	<b>1152-401-240</b>	S/Sleeve -T/Collar (use 1152301240) H1C-D-E
3519155	<b>1152-304-340</b>	Heat Sheild HT3B
3519302	<b>1152-301-340</b>	Heat Shield H1C
3519318	<b>1152-303-320</b>	Thrust Bearing (4LG Ramped )
3519336	<b>1152-301-435</b>	Shaft & Wheel H1C
3519471	<b>1152-304-350</b>	Shaft nut HT3B (right hand thread)
3519471	<b>1250-040-350</b>	lock Nut 7/16 x20 UNC RHThd (4LE/F/GK)
3519489	<b>1152-304-400</b>	Comp. Wheel HT3B
3519489	<b>1250-304-400</b>	C/W HT3
3519535	<b>1152-105-351</b>	Shaft Nut HC5A L/Hand Thread
3519535	<b>1152-303-351</b>	Shaft Nut 7/16 x 20 unc L/H>

OE Number	Melett No	Description
3519627	1152-105-100	Bearing HC5A Std/Std.
3519641	1152-105-140	Retaining Ring - HC5A
3519762	1900-000-036	Gasket (Oil Inlet T04B/3LD)
3519763	1900-000-025	Gasket
3519770	1900-000-026	Gasket. Oil Outlet 3LD
3519807	1900-000-027	Gasket Oil Outlet T04B
3521033	1152-105-435	Shaft & Wheel HC5A (replace 3521033)
3521034	1152-105-436	Shaft & Wheel HC5A (replace 3521034)
3521119	1152-303-580	Internal Serated Lock Washer
3521225	1152-105-600	Bolt (Turbine) HC5A
3521225	1301-027-600	Bolt (K27/T3 Turbine HT)
3521438	1152-304-435	Shaft & Wheel HT3B
3521441	1150-400-160	Piston Ring 0.885" (3L/4L/K36/HX50)
3521441	1150-400-160	Piston Ring (HX55/60 etc)
3521442	1152-105-170	Piston Ring HC5A (Comp End) Std/Std
3521442	1152-303-170	Piston Ring (0.750")
3521710	1152-301-400	H1C Comp Wheel
3521918	1152-105-400	Comp. Wheel HC5A
3522059	1152-302-750	REPAIR KIT
3522075	1152-304-435	Shaft & Wheel HT3B
3522740	1152-304-450	Bearing Housing HT3B
3522824	1152-301-402	Comp Wheel H1C
3522829	1153-050-156	O Ring HX50 (Comp. Cover)
3522879	1152-301-436	Shaft & Wheel H1E (replace 3522879)
3522880	1152-301-437	Shaft & Wheel H1E (replace 3522880)
3522904	1152-105-520	Lockplate (Turbine) HC5A
3523158	1150-403-124	Bearing 3LD Holset Type (OD+10/ID Std
3523159	1150-403-120	Bearing 3LD Holset Type (OD+10/ ID-10)
3523163	1250-040-124	Bearing 4L +0.010" OD/Std ID
3523164	1250-040-120	Bearing 4L +0.010" OD/ -.010" ID
3523275	1153-035-155	'O' Ring - HX35 Comp Cover
3523412	1152-105-160	Piston Ring HC5A (Turb End) Std/Std
3523420	1152-105-401	Comp. Wheel HC5A
3523613	1152-302-320	Thrust Bearing (H2C)
3524031	1152-105-438	Shaft and Wheel HC5A (replace 3524031)
3524418	1152-105-250	Shim (Thrust Brg) HC5A
3524419	1152-105-310	Oil Deflector/Baffle HC5A
3524706	1150-400-180	Piston Ring (0.885") +0.010" OD/Std Wdth
3524706	1153-055-180	Piston Ring HX55 Turb. +0.010"OD / Std. Wth
3524707	1152-302-180	Piston Ring (H1/H2)Turb +0.010OD Std
3524754	1100-040-100	Bearing (T3/TO4B) Standard
3524769	1100-040-150	O Ring (B/Hsg TO4B)
3524770	1100-040-320	Thrust Bearing
3524771	1100-040-160	Piston Ring TO4B( Step.Turb)
3524772	1100-040-170	Piston Ring T04B C/E
3524774	1100-040-350	Shaft Nut (TO4B T3 RHT)
3524775	1100-040-540	Lock Plate (TO4B Comp.)
3524776	1100-040-520	Lock Plate (TO4B Turb.)
3524778	1100-040-560	Bolt
3524779	1250-403-561	Bolt
3524780	1100-040-500	Clamp Plate (TO4B Comp.)
3524781	1100-040-480	CLAMP PLATE TURB
3524796	1100-040-750	Service Kit TO4B
3524840	1150-040-752	Service Kit 4LGZ (replace 3524840)
3524887	1100-040-400	Comp.Wheel (TO4B)
3525073	1152-105-620	Bolt (Diffuser) HC5A - (Micro Encap.)
3525358	1152-301-401	C/W H1E

OE Number	Melett No	Description
3525398	1152-301-401	C/W H1E
3525402	1100-040-181	Piston Ring T04B C/E +.010" Pink
3525568	1152-302-124	Bearing H2B/C/D OD +.010"/ StdID
3525569	1152-302-127	Bearing H2B/C/D OD Std/ -.010"ID
3525570	1152-302-120	Bearing H2B/C/D OD +.010"/ -.010"ID
3525739	1152-102-320	Thrust Bearing H2A
3525739	1152-301-320	Thrust Bearing (H1C)
3526275	1100-180-100	Bearing OD. Std / ID Std. T12 / T18
3526277	1100-180-320	Thrust Washer T12
3526281	1100-180-150	O RING
3526287	1100-045-170	Piston Ring TA45/ TA51/T18 /T 12 /T 6 C/E
3526288	1100-045-160	Piston Ring Step Bore(T12/45/51/TV )
3526291	1100-180-160	Piston Ring T18 S/B
3526293	1100-120-550	Lock plate (Insert Plate) T12
3526294	1100-180-550	Lock Plate T18
3526295	1100-120-520	Lock plate, Turb. Side. TE06 / T12
3526298	1101-461-550	Lock Plate TV series
3526299	1100-120-480	Clamp plate, Turb. Side T12
3526303	1100-120-610	Bolt. (Insert Plate) T12
3526304	1100-120-600	Bolt. Turb. Side TE06 / T12
3526314	1100-120-350	Shaft Nut. T12
3526316	1250-040-350	Shaft nut (4LE/F/GK)
3526318	1100-180-140	Snap Ring.
3526552	1100-025-140	Snap Ring. Brg Retain (T2/T25)
3526673	1100-040-124	Bearing TO4B OD +.010"/Std ID (Bronze NO Tin plating)
3526675	1100-040-120	Bearing +.010" OD / -.010" ID (Bronze. NO Plating)
3527039	1250-040-127	Bearing 4L Std OD/-.010" ID
3527047	1152-304-401	Comp. Wheel HT3B
3527184	1100-030-561	Bolt H1C Metric (Seal Plate to B/Hsg) Micro encapsulated
3527184	1152-301-561	Set Screw H1C (Micro Enc Seal Plate/B/Hsg)>
3527566	1153-030-145	Retaining Ring - HX30/35/40 - Insert
3528104	1153-035-310	Oil Deflector/Baffle HX35/40
3528933	1153-035-150	'O' Ring - HX30/35/40 Seal Plate
3529158	1100-040-320	Thrust Bearing
3529372	1100-120-645	V' Band locknut
3529372	1100-120-645	Nut. V Band clamp. T12
3529372	1153-050-645	V-Band Nut HX50/55
3529812	1100-040-400	Comp.Wheel (TO4B)
3530592	1152-301-450	Bearing Housing H1C
3530924	1153-035-200	Thrust Flinger HX30/35/40
3530998	1152-105-120	Bearing HC5A +0.010"OD/ -.010" ID
3530999	1152-105-124	Bearing HC5A +0.010"OD/ Std ID
3531000	1152-105-127	Bearing HC5A Std OD/ -.010" ID
3531419	1153-030-320	Thrust Bearing HX30
3531917	1250-403-300	Insert Plate
3532217	1153-035-240	Thrust Collar HX35/40
3532814	1150-400-183	Piston Ring (0.750") Std OD/ +0.006" Wth >
3532814	1153-050-160	Piston Ring (Turb) (HX50)
3534451	1153-030-240	Thrust Collar HX30
3534833	1153-055-100	Bearing HX55 Std OD/Std ID
3536075	1153-060-321	Thrust Bearing HT3B / HT60
3536143	1153-050-160	Piston Ring HX50 Turb. end
3536320	1100-180-190	Wear Washer (Bearing) T12
3536914	1152-105-320	Thrust Bearing HC5A
3537147	1152-301-400	H1C Comp Wheel
3537150	1152-301-402	Comp Wheel H1C
3537151	1152-301-401	C/W H1E

OE Number	Melett No	Description
3537154	1152-301-401	C/W H1E
3545039	1150-040-750	REPAIR KIT
3545039	1301-504-752	Service Kit 4LE/4LF
3545115	1100-030-270	Carbon Seal T3/T04B
3545121	1100-025-150	O Ring (Insert / Seal Plate T2 / T25
3545123	1100-025-620	Screw Thrust Brg Ret. T2/T25 (Micro Encapsulated)
3545126	1100-020-100	Bearing Std. (Short T2/T25)Bronze
3545127	1100-025-100	Bearing Std. (Long T2/T25
3545132	1100-180-221	Spacer Sleeve (T18)
3545133	1100-180-220	THRUST SPACER T18A/TV71-81
3545136	1100-180-110	Bearing T12/T18 +.005"OD/-.005"ID
3545162	1100-180-120	Bearing T12/T18 +.010"OD/-.010"ID
3545163	1100-180-127	Bearing T18 Std OD/ -.010" ID
3545164	1100-120-160	Piston Ring Smooth Bore T12
3545171	1100-040-200	Thrust Collar (Dynamic TO4B)
3545299	1250-403-321	Thrust Bearing 3LM
3545333	1101-061-200	Thrust Collar (TV61-81 T18A)
3545337	1152-301-127	Bearing H1C STD OD -0.010 I.D.
3545338	1152-301-120	Bearing H1C OD +.010"/ ID-.010"
3545339	1152-301-124	Bearing H1C OD +.010"/ ID Std
3545341	1100-120-150	O Ring. Seal Plate T12
3545342	1100-120-155	O Ring B/Housing to C/Hsg T12
3545344	1153-055-750	Repair Kit HX55
3545345	1153-060-750	Repair Kit HX60 / HX60W
3545355	1301-027-480	Clamp Plate (K27/3LKZ Turb)
3545357	1250-030-150	O Ring (Insert HSKM)
3545358	1301-027-500	Clamp Plate (3LD/3LEP/K27 Comp.)
3545361	1301-027-160	Piston Ring K26
3545362	1100-045-124	Bearing T45/51 +10OD / STD ID
3545364	1100-045-120	Bearing T45/51 +10OD / -10ID
3545370	1301-026-620	Cap screws K26/27/ S/P to B/Hsg M6x16
3545371	1301-027-581	Washer (K27 Seal Plate)
3545372	1301-027-101	Bearing (Grooved O.D. K27)
3545373	1301-027-150	O Ring (K27 Comp. Hsg.)
3545374	1301-027-320	Thrust Bearing (K27) 270 degree
3545375	1301-027-100	Bearing (Smooth O.D. K27)
3545377	1100-180-124	Bearing T18 +.010" OD/Std ID
3545399	1152-301-750	REPAIR KIT
3545419	1301-027-310	Oil Deflector (K26/K27)
3545420	1401-405-320	Thrust Bearing TDO5
3545421	1301-027-350	Shaft Nut (K24/26/27) 6mm RHT
3545423	1301-036-150	O Ring (K361) C/Hsg to B/Hsg
3545424	1100-040-750	Service Kit TO4B
3545431	1150-040-751	REPAIR KIT 4L
3545434	1301-027-750	REPAIR KIT K27
3545502	1152-302-750	REPAIR KIT H2C
3545503	1152-302-750	REPAIR KIT H2C
3545504	1152-302-750	REPAIR KIT H2C
3545546	1401-405-150	O Ring TDO5/TDO6 (Insert Plate)
3545552	1401-405-160	Piston Ring TC05 / 6 T/E
3545553	1401-405-170	Piston Ring TCO5/6 TD05/6 comp end
3545623	1150-040-751	REPAIR KIT 4L
3545627	1153-050-750	Service Kit HX50 (replace 3545627)
3545646	1150-040-752	REPAIR KIT 4L
3545647	1152-105-750	Repair Kit HC5A (replace 3545647)
3545648	1150-040-750	REPAIR KIT 4L
3545651	1152-301-751	Minor Kit H1B

OE Number	Melett No	Description
3545653	<b>1152-302-750</b>	Minor Kit H2C (similar to 3545653)
3545657	<b>1150-403-751</b>	Service Kit (3LD Step Bore)
3545657	<b>1150-423-750</b>	Repair kit 3LE
3545658	<b>1150-403-750</b>	Service Kit (3LD Smooth Bore)
3545659	<b>1301-504-752</b>	Service Kit 4LE/4LF
3545660	<b>1150-040-751</b>	Service Kit All 4LE/4LF (replace 3545659/60)
3545661	<b>1150-040-750</b>	Service Kit 4LGK (replace 3545661)
3545661	<b>1151-504-751</b>	Repair Kit 4LE/F/G/w/c R/H Thrd Nut
3545662	<b>1152-303-750</b>	Service Kit H3B/HC3B (replace 3545662/4)
3545664	<b>1152-203-750</b>	Repair Kit (HC3B)
3545669	<b>1152-304-750</b>	Repair kit HT3B
3545670	<b>1250-404-753</b>	Repair Kit 4MD
3545674	<b>1151-604-750</b>	Repair Kit 4MF (replace 3545674)
3545678	<b>1152-301-752</b>	Minor Kit H2A
3545679	<b>1152-104-750</b>	Repair Kit HT4B
3545824	<b>1101-280-750</b>	Repair Kit TV6/7/8
3545827	<b>1100-025-756</b>	REPAIR KIT T2
3545828	<b>1100-025-754</b>	REPAIR KIT T2
3545829	<b>1100-045-753</b>	REPAIR KIT T45
3545831	<b>1100-040-760</b>	REPAIR KIT T04
3545832	<b>1100-180-752</b>	Repair Kit T18 (Step Bore)
3545838	<b>1100-120-752</b>	Service Kit T12 (Minor) Step Bore
3545839	<b>1100-120-753</b>	Service Kit T12 (minor) Smooth Bore
3545845	<b>1150-040-751</b>	REPAIR KIT 4L
3545928	<b>1100-025-160</b>	Piston ring T2
3545981	<b>1152-105-180</b>	Piston Ring HC5A Turb +0.010"OD/Std Wdth
3545985	<b>1100-045-753</b>	REPAIR KIT T45
3545987	<b>1152-301-750</b>	REPAIR KIT H1C
3545989	<b>1100-040-200</b>	Thrust Collar (Dynamic TO4B)
3545997	<b>1153-050-751</b>	Service Kit HX50 (replace 3545997/4027045)
3575015	<b>1153-050-751</b>	REPAIR KIT HX50
3575139	<b>1152-302-750</b>	REPAIR KIT H2C
3575169	<b>1153-035-750</b>	Minor Kit HX35/40 (replace 3575169)
3575181	<b>1153-055-750</b>	Service Kit HX55 (replace 3575181 & 3580762)
3575193	<b>1153-050-750</b>	REPAIR KIT HX50
3575205	<b>1153-030-750</b>	Minor Kit HX30/HX30W (replace 3575205)
3575210	<b>1151-504-750</b>	Repair Kit 4LE/F/G w/c L/H Thrd Nut
3575234	<b>1153-050-750</b>	REPAIR KIT HX50
3580135	<b>1301-027-750</b>	REPAIR KIT K27
3580192	<b>1153-055-124</b>	Bearing HX55 +0.010"OD/ Std ID
3580193	<b>1153-055-120</b>	Bearing HX55 +0.010"OD/-0.010"ID
3580267	<b>1152-301-750</b>	REPAIR KIT H1C
3580758	<b>1153-050-750</b>	REPAIR KIT HX50
3580762	<b>1153-055-750</b>	REPAIR KIT HX55
3590296	<b>1153-030-640</b>	V' Band T-Bolt
3591425	<b>1153-050-155</b>	O Ring HX50 (Comp. Cover)
3591655	<b>1153-050-320</b>	Thrust Bearing HX50/55
3592050	<b>1153-030-645</b>	V Band Nut HX30
3594952	<b>1152-304-435</b>	Shaft & Wheel HT3B
3595129	<b>1153-040-435</b>	Shaft and Wheel - HY40 (replaces 3595129)
3595651	<b>1153-035-320</b>	Thrust Bearing HX35-40
3596402	<b>1152-301-351</b>	Shaft Nut H1C/HX30/35/40
3599638	<b>1152-301-400</b>	Comp. Wheel H1C
3599641	<b>1152-301-402</b>	Compressor Wheel H1C
3599642	<b>1152-301-401</b>	Comp. Wheel H1C
3709510	<b>1301-036-140</b>	Snap Ring (H.S.K)
3709737	<b>1900-000-037</b>	Gasket Oil Inlet H2C

OE Number	Melett No	Description
3709738	1900-000-025	Gasket
3709753	1152-302-140	Snap Ring H2C / 3LKS
3709765	1152-303-170	Piston Ring .750"
3709774	1152-302-520	Lock Plate (H2C Turb)
3715186	1100-120-645	Nut. V Band clamp. T12
3718373	1250-404-142	Snap Ring
3718455	1301-036-220	Spacer Sleeve (4LE/K36)
3722366	1250-040-100	Bearing (4LE- HC3 -HT3B -K361) Std OD/ Std ID
3722447	1150-400-160	Piston Ring (HCSKM)
3723863	1250-403-140	Snap Ring
3751145	1250-403-561	Bolt
3751240	1301-036-240	Thrust Ring
3751948	1250-030-150	O Ring (Insert HSKM)
3752869	1250-040-320	Thrust Bearing (4L-/HC3/3LKS)
3755739	1900-000-037	Gasket Oil Inlet H2C
3756754	1152-302-160	Piston Ring (H1C/H2C/3FD/J) Turb.End
3757736	1250-040-320	Thrust Bearing (4L-/HC3/3LKS)
3757753	1250-040-260	Oil Control Sleeve (4LE)
3758656	1250-040-350	Shaft nut (4LE/F/GK)
3758848	1152-302-170	Piston Ring (H1C-H2C) Comp End
3758848	1401-404-180	Piston Ring TD04 T/end +.010"OD
3759618	1150-704-300	Insert Plate 4LGK/HC3
3761697	1152-302-100	Bearing Std OD/ Std ID H2B/C/D
3762915	1152-302-150	O Ring (H2A-B-C Seal plate) V75 67.95 2.62 B
3801096	1200-050-751	Service Kit T-ST-VT 50 Cum Sml
3801101	1200-050-752	Service Kit T-ST-VT 50 Cum MajorKit (Inc. B/Hsg)
3819900	1900-000-035	GASKET
3904761	1152-301-100	Bearing Std (H1C)
4024788	1153-035-751	Minor Kit HX35W (replace 4027448)
4027045	1153-050-751	REPAIR KIT HX50
4027309	1152-301-750	Minor Kit H1C/D/E & H2A (similar 4027309)
4027490	1401-404-752	REPAIR KIT HX25
4027559	1100-181-750	REPAIR KIT T18A
4027665	1100-040-750	Service Kit TO4B
4027675	1153-050-750	REPAIR KIT HX50
4027738	1301-027-750	REPAIR KIT K27
4027740	1301-028-750	REPAIR KIT K28
4027880	1153-060-750	Repair Kit HX60 / HX60W
4038358	1153-060-320	Thrust Bearing HX60